




# Scoops Bolt Pattern - Printable

Print this document at 100%, with NO SCALING and compare to your aerobar mounting points

Bolt pattern for :  
Open-Back Scoops and Closed-Back Scoops

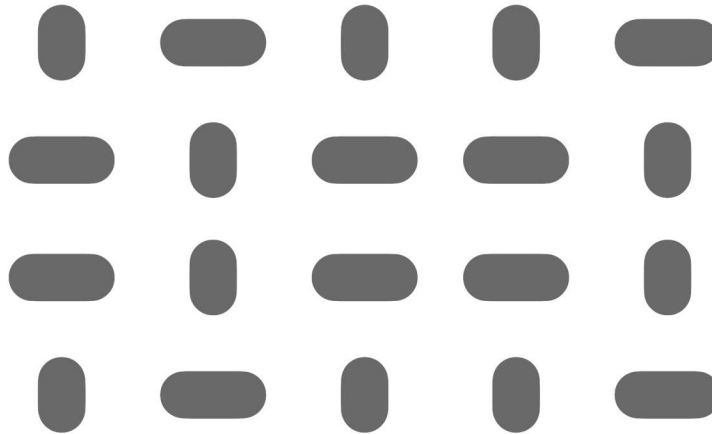

Bolt pattern for :  
Scoops Ultimate

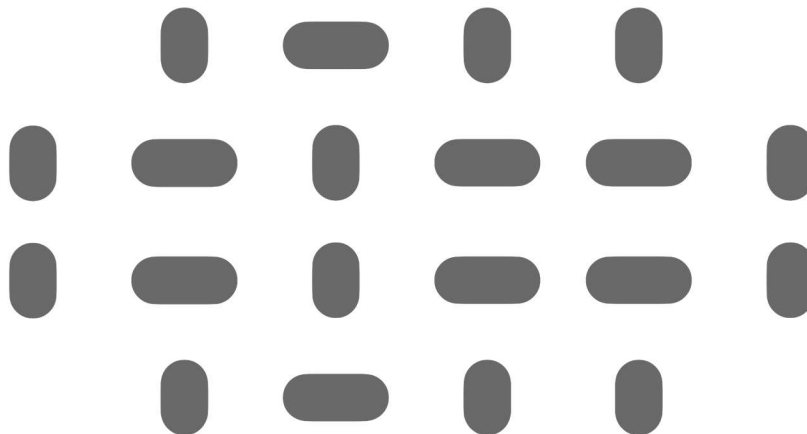

after printing, this line should measure 100mm long